

RAVE SL-3451 Laser Show RGY
DMX Channels

Channel	Function	Value	Description
1	Mode	0-69	Cut off
		70-139	Sound active
		140-209	Automatic
		210-255	Manual
2	Pattern selection	0-33	Static pattern
		34-255	Dynamic pattern
3	Vertical move	0-160	Manual control
		161-190	Automatic from down to up
		191-220	Automatic from up to down
		221-255	Automatic up and down
4	Horizontal move	0-160	Manual control
		161-190	Automatic from left to right
		191-220	Automatic from right to left
		221-255	Automatic left and right
5	Scale	0-2	No scale
		3-92	Manual
		93-146	Automatic from small to big
		147-200	Automatic from big to small
		201-255	Automatic big and small
6	Vertical stretch	0-150	Manual stretch
		151-255	Automatic stretch
7	Horizontal stretch	0-150	Manual stretch
		151-255	Automatic stretch
8	Rotation	0-180	Manual rotation
		181-217	Automatic clockwise rotation
		218-255	Automatic counter-clockwise rotation
9	Strobe	0-255	8-step strobe speed (0-255)/30
10	Display	0-69	Normal
		70-139	Dot and line
		140-209	Section display
		210-255	Dot display
11	Colour	0-255	Y-R-G section display
12	Reset	0-255	>200 = RESET